

Low Pressure Transducer

**FOR ADDITIONAL INFORMATION
SEE PR-274/275 DATA SHEET**

SPECIFICATIONS

Accuracy*: ± 1% FS

Enclosure Mount

Overpressure: 10 PSID

Supply Voltage: 12-40 VDC
12-35 VAC (VDC output units only)

Supply Current: VDC Units - 10 mA max.
mA Units - 20 mA max.

Enclosure: 18 Ga C. R. Steel NEMA 4 (IP-65) or Panel Mount Chassis

Finish: Baked on enamel-PMS2GR88B

Compensated Temp Range: 25°F-150°F (-4°C-65°C)

T. C. Error: ±0.0125%/°F (.02%/°C)

Operating Temp Range: 0°F-175°F (-18°C-80°C)

Media Compatibility: Clean dry air or any inert gas

Environmental: 10-90%RH Non-Condensing

Termination: Unpluggable screw terminal block

Wire Size: 12 Ga max.


Load Impedance: 1.6K ohms max. at 40 VDC (mA output units)
1K ohms min. (VDC output units)

Weight: Enclosure 1.0 lbs. (.45 kg)

Panel Mount: 0.5lbs. (.25 kg)

**Includes non-linearity, hysteresis and non-repeatability*

PACKAGING	RANGE	OUTPUT
274 (enclosure)	R1 (°wc) 0 TO 0.10 / -0.05 TO + 0.05	mA (4-20 mA 2 wire)
275 (panel mount)	R2 (°wc) 0 TO 1.0 / 0 TO 0.5 / 0 TO 0.25 / -0.5 TO + 0.5 / -0.25 TO + 0.25 / -0.125 TO + 0.125	VDC (0-5 VDC or 0-10 VDC field selectable)
	R3 (°wc) 0 TO 5.0 / 0 TO 2.5 / 0 TO 1.25 / -2.5 TO +2.5 / -1.25 TO + 1.25 / -0.625 TO + 0.625	
	R4 (°wc) 0 TO 30 / 0 TO 15 / 0 TO 7.5 / -15.0 TO + 15.0 / -7.5 TO +7.5 / -3.75 TO + 3.75	
	R5 (pa) 0 TO 25 / -12.5 TO + 12.5	
	R6 (pa) 0 TO 250 / 0 TO 125 / 0 TO 62.5 / -125 TO + 125 / -62.5 TO + 62.5 / -31.25 TO + 31.25	
	R7 (pa) 0 TO 1250 / 0 TO 625 / 0 TO 312.5 / -625 TO + 625 / -312.5 TO + 312.5 / -156.25 TO + 156.25	
	R8 (pa) 0 TO 7500 / 0 TO 3750 / 0 TO 1875 / -3750 TO + 3750 / -1875 TO + 1875 / -937.5 TO + 937.5	

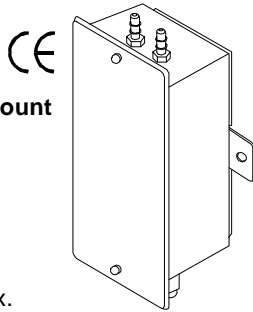

INSTALLATION

Inspection Inspect the package for damage. If damaged, notify the appropriate carrier immediately. If undamaged, open the package and inspect the device for obvious damage. Return damaged products.

- Requirements**
- Tools (not provided)
 - Digital Volt-ohm Meter (DVM)
 - Appropriate screwdriver for mounting screws
 - Appropriate drill and drill bit for mounting screws
 - Appropriate accessories
 - Two #8 self-tapping mounting screws (not provided)
 - Training: Installer must be a qualified, experienced technician

Warning:

- Disconnect power supply before installation to prevent electrical shock and equipment damage.
- Make all connections in accordance with the job wiring diagram, and in accordance with national and local electrical codes. Use copper conductors only.



Caution:

- Use electrostatic discharge precautions (e.g., use of wrist straps) during installation and wiring to prevent equipment damage.
- Avoid locations where severe shock or vibration, excessive moisture or corrosive fumes are present. NEMA Type 4 housings are intended for outdoor use primarily to provide a degree of protection against wind-blown dust, rain, and hose-directed water.
- Do not exceed ratings of the device.

Mounting The PR-274/275 must be mounted as indicated by the arrows on the enclosure. Refer to Figure-7 for mounting dimensions.

1. Remove the transducer cover using a Phillips head screwdriver.
2. Select the mounting location.
3. Mount transducer on a vertical surface with two #8 self-tapping screws (not provided).
4. Pull wires through bottom of enclosure and make necessary connections.
5. Replace cover and make pneumatic connections.

Wiring

Use maximum 12 AWG wire for wiring terminals. Use flexible 1/4" O.D., 5/32" I.D. tubing for the high and low pressure connections. Refer to Figures 1, 2, 3, & 4 for wiring information and Figures 5 & 6 for jumper designations.

Wiring PR-274/275 Units with mA Output


PR-274/275 pressure transducers are 4-20 mA output units powered with a 12-40 VDC supply.

The following describes the proper wiring of these pressure transducers with mA output:

1. Remove the blue terminal block by carefully pulling it off the circuit board.
2. Locate the [+] and [-] terminal markings on the board.
3. Attach the supply voltage to the [+] lead.
4. Connect the 4-20 mA output ([-] terminal) to the controller's input terminal.
5. Ensure that the power supply common is attached to the common bus of the controller.
6. Re-insert the terminal block to the circuit board and apply power to the unit.
7. Check for the appropriate output signal using a DVM set on DC milliamps connected in series with the [-] terminal.

Low Pressure Transducer

PR-274/275 Pressure Transducers with mA Output

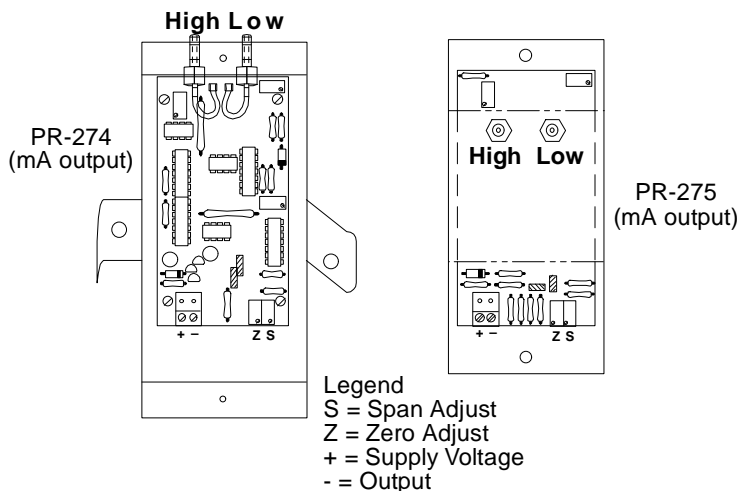

Wiring PR-274/275 Units with VDC Output

PR-274/275 pressure transducers with Vdc output are field selectable 0-5 VDC or 0-10 VDC output and can be powered with either 12-40 VDC or 12-35 VAC. The following describes the proper wiring of these pressure transducers with VDC output:


1. Remove the blue terminal block by carefully pulling it off the circuit board.
2. Locate the (+), (-), and (0) terminal markings on the board.
3. Attach the power wires to the (+) and (-) terminals. The (-) terminal is also the negative output terminal.
4. Connect the (0) terminal, which is the positive VDC output terminal, to the controller's input.
5. Re-insert the terminal block to the circuit board and apply power to the unit.
6. Check the appropriate VDC output using a voltmeter set on DC volts across the (0) and (-) terminals.

Caution: If you are using grounded AC, the hot wire must be on the (+) terminal. Also, if you are using a controller without built-in isolation, use an isolation transformer to supply the PR-274/275 transducer.

Caution: When multiple PR-274/275 units are powered from the same transformer, damage will result unless all 24G power leads are connected to the same power lead on all devices. It is mandatory that correct phasing be maintained when powering more than one device from a single transformer.

Caution: This product contains a half-wave rectifier power supply and must not be powered off transformers used to power other devices utilizing non-isolated full-wave rectifier power supplies.

PR-274/275 Pressure Transducers with VDC Output

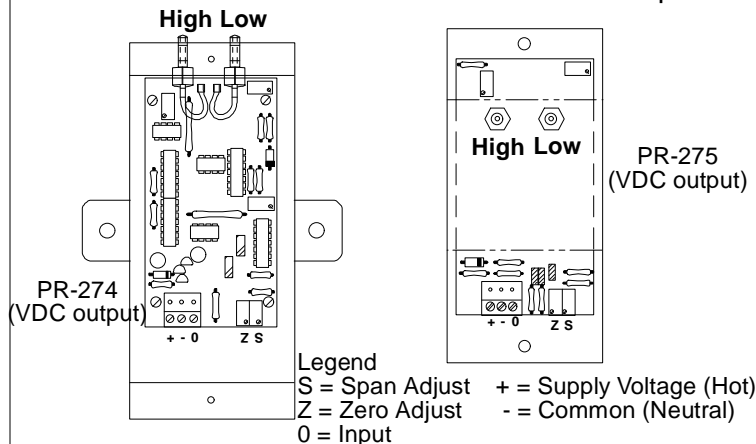

TYPICAL APPLICATIONS (wiring diagrams)

Figure-1 and Figure-2 illustrate typical wiring diagrams for the PR-274/275, 4-20 mA, two-wire low pressure transducers.

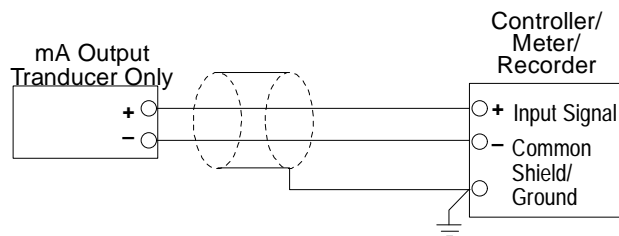
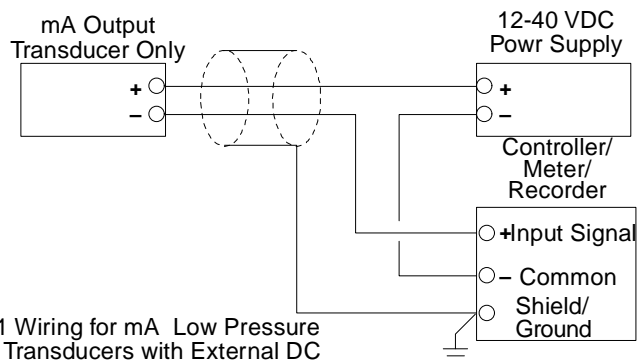


Figure-2 Wiring for mA Low Pressure Transducers Where Controller or Meter has Internal DC Power Supply

Low Pressure Transducer

Figure-3 and Figure-4
 Illustrate typical wiring diagrams for the PR-274/275, 0-5/0-10
 VDC output Low Pressure Transducers.

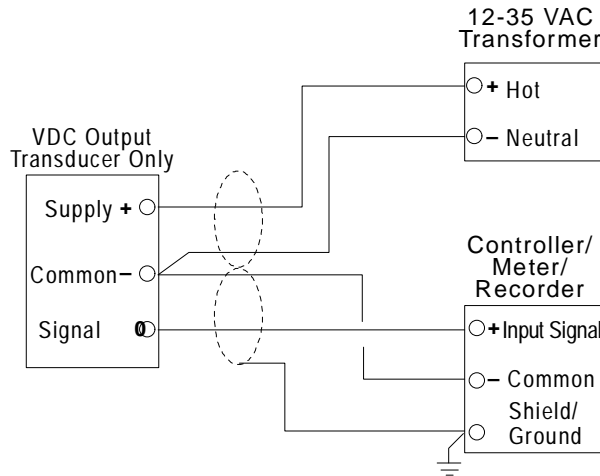


Figure-3 Wiring for VDC Low Pressure Transducers
 When Applied with External AC Supply.

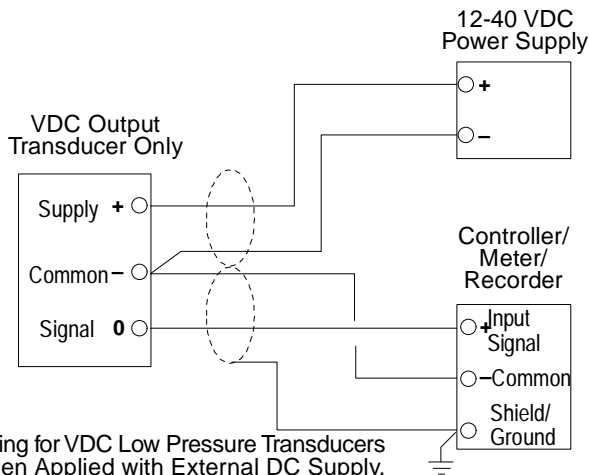


Figure-4 Wiring for VDC Low Pressure Transducers
 When Applied with External DC Supply.

ADJUSTMENTS

Jumper Jumper selections vary according to the low pressure transducer (mA or VDC).

Selection The following describes the possible selections for each model.

Jumper Selections for PR-274/275 Low Pressure Transducers with mA Outputs

The possible range configurations and jumper selections for pressure transducers with mA outputs are shown in Table-1 and Figure-5, respectively.

Table-1 Range configurations for Low Pressure Transducers with mA output

Range	Range Configurations (inches w.c.)							
	A	B	C	D	E	F	G	H
R1	0 to .10	-0.05 to +0.05	-----	-----	-----	-----	-----	-----
R2	-----	-----	0 to 1.0	0 to 0.5	0 to 0.25	-0.5 to +0.5	-0.25 to +0.25	-0.125 to +0.125
R3	-----	-----	0 to 5.0	0 to 2.5	0 to 1.25	-2.5 to +2.5	-1.25 to +1.25	-0.625 to +0.625
R4	-----	-----	0 to 30	0 to 15	0 to 7.5	15.0 to +15.0	-7.5 to +7.5	-3.75 to +3.75

Range	Range Configurations (pa)							
	A	B	C	D	E	F	G	H
R5	0 to 25	-12.5 to +12.5	-----	-----	-----	-----	-----	-----
R6	-----	-----	0 to 250	0 to 125	0 to 62.5	-125 to +125	-62.5 to +62.5	-31.25 to +31.25
R7	-----	-----	0 to 1250	0 to 625	0 to 312.5	-625 to +625	-312.5 to +312.5	-156.25 to +156.25
R8	-----	-----	0 to 7500	0 to 3750	0 to 1875	-3750 to +3750	-1875 to +1875	-937.5 to +937.5

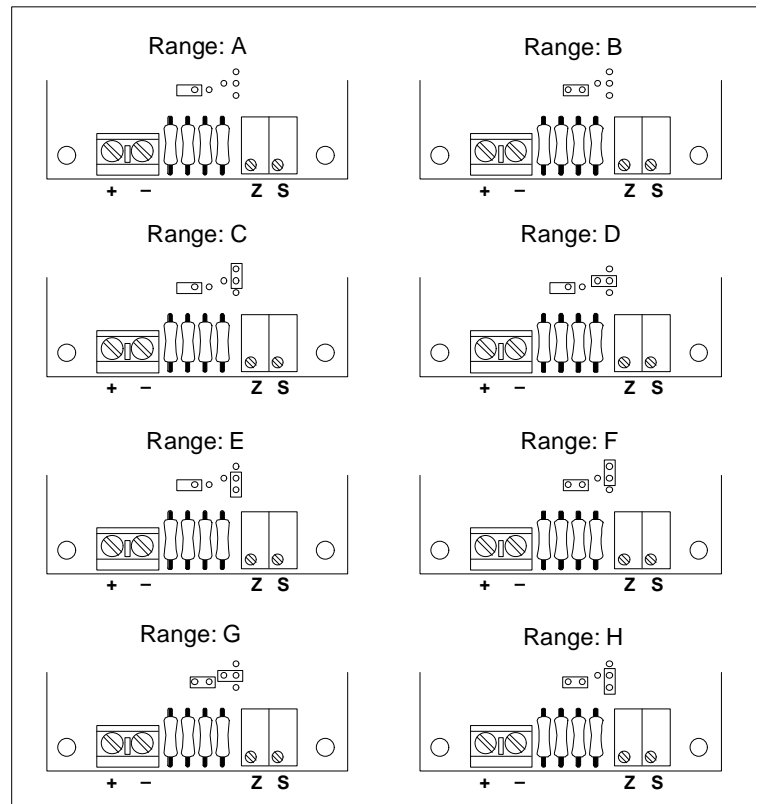


Figure-5 Jumper Selections for Low Pressure Transducers with mA Outputs.

Jumper Selections for PR-274/275 Low Pressure Transducers with VDC Outputs


The possible range configurations and jumper selections for low pressure transducers with VDC outputs are shown in Table-2 and Figure-6, respectively.

Low Pressure Transducer

Table-2 Range Configurations for Low Pressure Transducers with VDC Outputs.

Range	Output Configurations		Range Configurations (inches w.c.)							
			A	B	C	D	E	F	G	H
R1	0 to 5 VDC	0 to 10 VDC	0 to .10	-0.05 to +0.05	-----	-----	-----	-----	-----	-----
R2			-----	-----	0 to 1.0	0 to 0.5	0 to 0.25	-0.5 to +0.5	-0.25 to +0.25	-0.125 to +0.125
R3			-----	-----	0 to 5.0	0 to 2.5	0 to 1.25	-2.5 to +2.5	-1.25 to +1.25	-0.625 to +0.625
R4			-----	-----	0 to 30	0 to 15	0 to 7.5	-15.0 to +15.0	-7.5 to +7.5	-3.75 to +3.75

Range	Output Configurations		Range Configurations (pa)							
			A	B	C	D	E	F	G	H
R5	0 to 5 VDC	0 to 10 VDC	0 to 25	-12.5 to +12.5	-----	-----	-----	-----	-----	-----
R6			-----	-----	0 to 250	0 to 125	0 to 62.5	-125 to +125	-62.5 to +62.5	-31.25 to +31.25
R7			-----	-----	0 to 1250	0 to 625	0 to 312.5	-625 to +625	-312.5 to +312.5	-156.25 to +156.25
R8			-----	-----	0 to 7500	0 to 3750	0 to 1875	-3750 to +3750	-1875 to +1875	-937.5 to +937.5

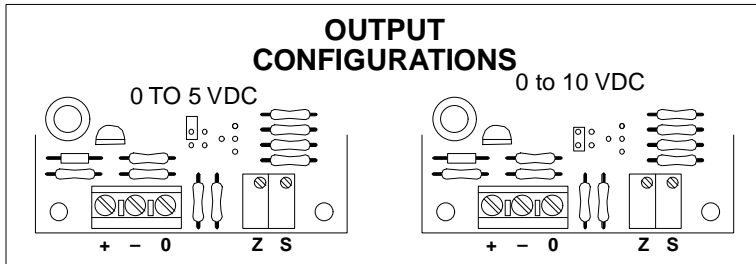

RANGE CONFIGURATIONS

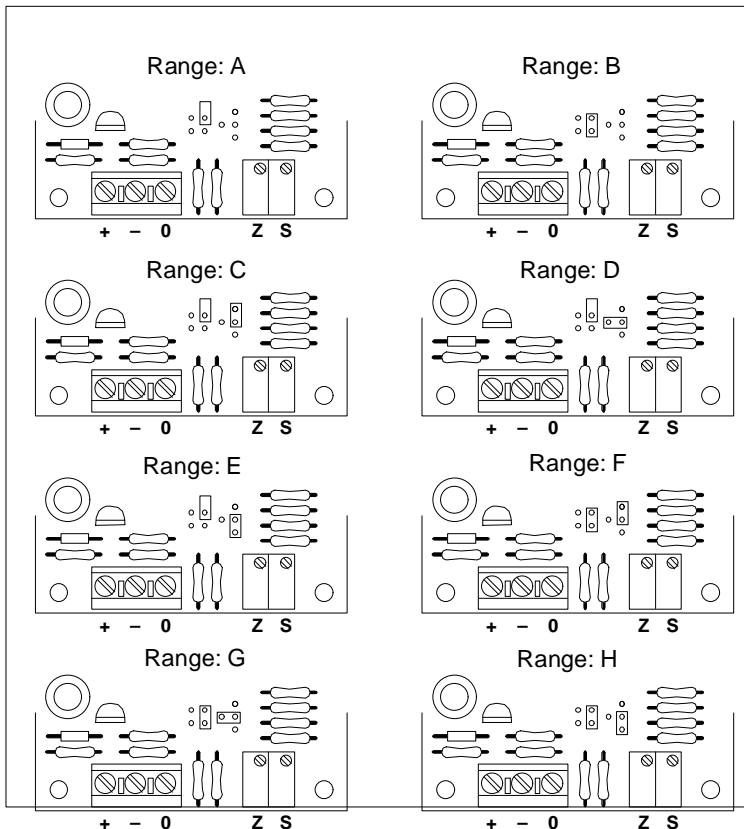


Figure-6 Jumper Selections for Low Pressure Transducers with VDC Outputs.

CHECKOUT

1. Verify that the unit is mounted in the correct position.
2. Verify appropriate input signal and supply voltage.

Caution: Never connect 120 VAC to these transducers. Never connect AC voltage to a unit intended for DC supply.

Transducer Operation

3. Verify appropriate configuration range. This is a rough functional check only.
1. Adjust the pressure to obtain maximum output signal for appropriate range.
2. Output should be 20 mA or 5 or 10 VDC.
3. Adjust the pressure to obtain minimum output signal
4. Output should be 4 mA or 0 VDC.

Note: The PR-274/275 is a highly accurate device. For applications requiring a high degree of accuracy, the use of laboratory quality meters and gauges are recommended.

CALIBRATION

All units are factory calibrated to meet or exceed published specifications. If field adjustment is necessary follow the instructions below.

Calibration of PR-274/275 mA Units

1. Connect terminals (+) and (-) to the appropriate power source.
2. Connect the DVM in series on the (-) terminal.
3. Apply low pressure to the unit and carefully adjust the zero trimmer (Z) to obtain desired low output.
4. Apply high pressure to the unit and adjust span trimmer (S) to obtain the desired high output pressure.
5. Repeat steps 3 and 4 until desired calibration is achieved.

Calibration of PR-274/275 VDC Units

1. Connect terminals (+) and (-) to the appropriate power source. The (-) terminal is also the negative output terminal.
2. Connect the DVM on DC volts across (0) and (-) terminal.
3. Apply low pressure to the unit and carefully adjust the zero trimmer (Z) to obtain desired low output.
4. Apply high pressure to the unit and adjust span trimmer (S) to obtain the desired high output pressure.
5. Repeat steps 3 and 4 until desired calibration is achieved.

MAINTENANCE

Regular maintenance of the total system is recommended to assure sustained optimum performance.

FIELD REPAIR

None. Replace with a functional unit.

WARRANTY

See Data Sheet for additional information.

Dimensional Data


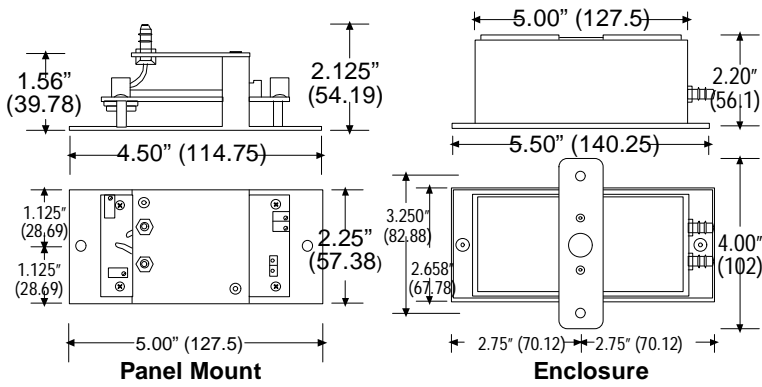



Figure-7 PR-274/275 Low Pressure Transducer Dimensions shown in inches and millimeters (mm).

For Technical / Application Assistance contact your nearest office.

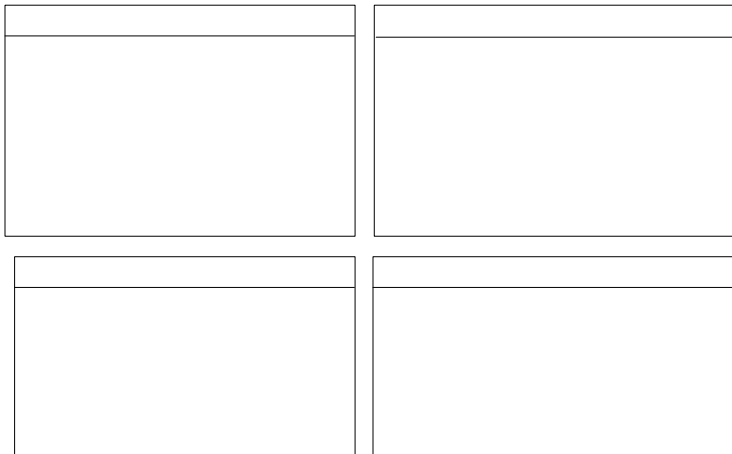

MAMAC Systems Inc. reserves the right to change any specifications without notice to improve performance, reliability, or function of our products.

Low Pressure Transducer - mA Output

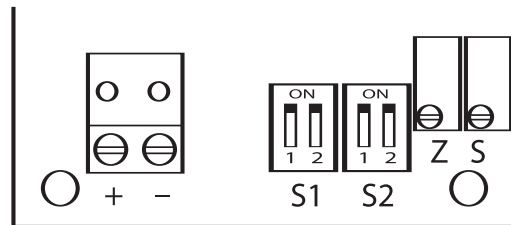


Range Configuration - Uni-Directional Switch - S1	
R1 0 - 0.10 "wc / 25 pa (default)	
R2 0 - 1.0 "wc / 250 pa (default)	
0 - 0.5 "wc / 125 pa	
0 - 0.25 "wc / 62.5 pa	
R3 0 - 5.0 "wc / 1250 pa (default)	
0 - 2.5 "wc / 625 pa	
0 - 1.25 "wc / 312.5 pa	
R4 0 - 30.0 "wc / 7500 pa (default)	
0 - 15.0 "wc / 3750 pa	
0 - 7.5 "wc / 1875 pa	

Range Configuration - Bi-Directional Switch - S1	
R1 +/- 0.05" wc / 12.5 pa (default)	
R2 +/- 0.5 "wc / 125 pa (default)	
+/- 0.25 "wc / 62.5 pa	
+/- 0.125 "wc / 31.25 pa	
R3 +/- 2.5 "wc / 625 pa (default)	
+/- 1.25 "wc / 312.5 pa	
+/- .625 "wc / 156.25 pa	
R4 +/- 15.0 "wc / 3750 pa (default)	
+/- 7.5 "wc / 1875 pa	
+/- 3.75 "wc / 937.5 pa	

Output Configuration Switch - S2	
Uni-directional (default)	
Bi-directional	

Low Pressure Transducer - VDC Output

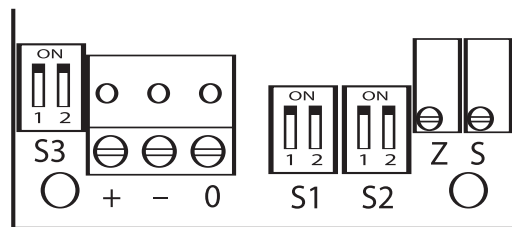

Range Configuration - Uni-Directional Switch - S1	
R1 0 - 0.10 "wc / 25 pa (default)	
R2 0 - 1.0 "wc / 250 pa (default)	
0 - 0.5 "wc / 125 pa	
0 - 0.25 "wc / 62.5 pa	
R3 0 - 5.0 "wc / 1250 pa (default)	
0 - 2.5 "wc / 625 pa	
0 - 1.25 "wc / 312.5 pa	
R4 0 - 30.0 "wc / 7500 pa (default)	
0 - 15.0 "wc / 3750 pa	
0 - 7.5 "wc / 1875 pa	

Range Configuration - Bi-Directional Switch - S1	
R1 +/- 0.05" wc / 12.5 pa (default)	
R2 +/- 0.5 "wc / 125 pa (default)	
+/- 0.25 "wc / 62.5 pa	
+/- 0.125 "wc / 31.25 pa	
R3 +/- 2.5 "wc / 625 pa (default)	
+/- 1.25 "wc / 312.5 pa	
+/- .625 "wc / 156.25 pa	
R4 +/- 15.0 "wc / 3750 pa (default)	
+/- 7.5 "wc / 1875 pa	
+/- 3.75 "wc / 937.5 pa	

Output Configuration Switch - S2	
Uni-directional (default)	
Bi-directional	

Output Value Switch - S3	
0 - 10 VDC (default)	
0 - 5 VDC	